




Developed for Exclusive use by


Prevost Owners Group

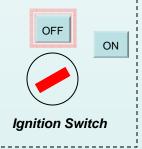



Written Permission Must be Obtained for Use by Others

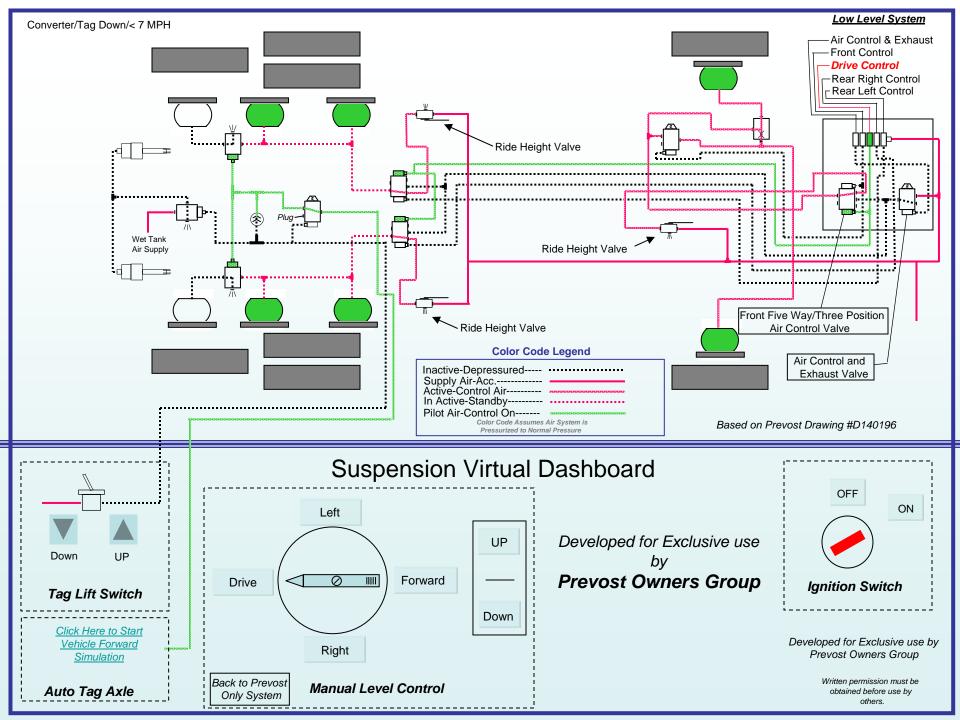

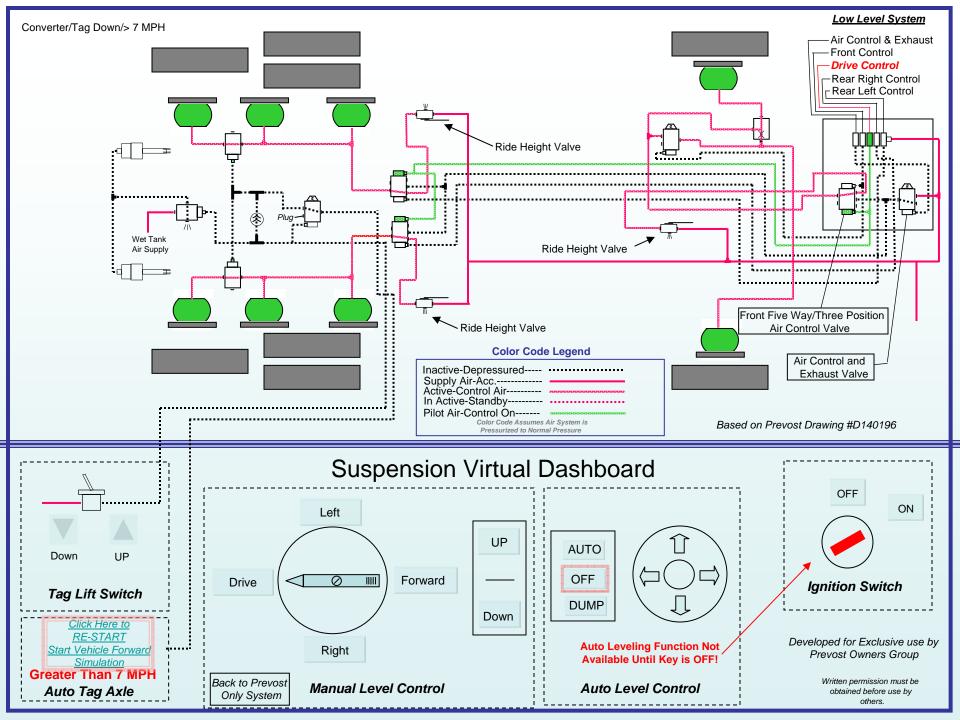


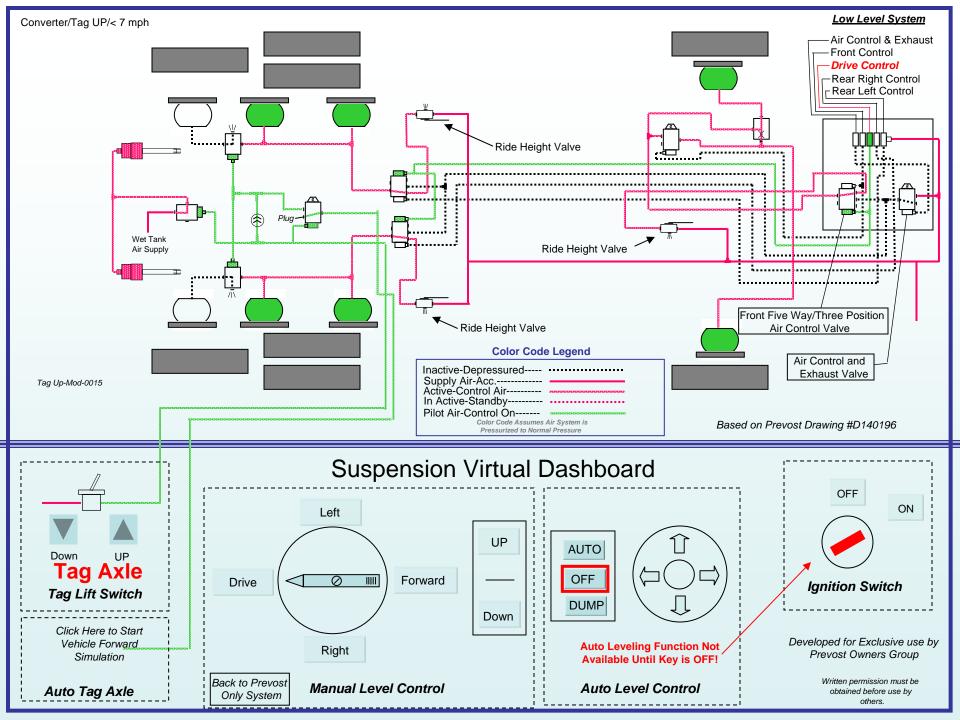


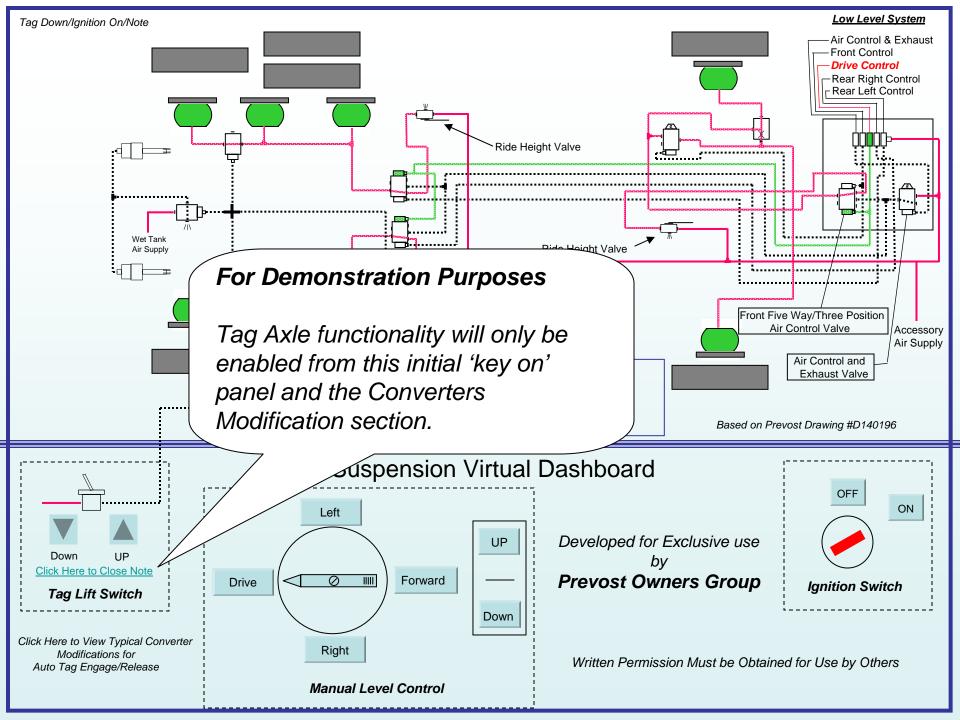


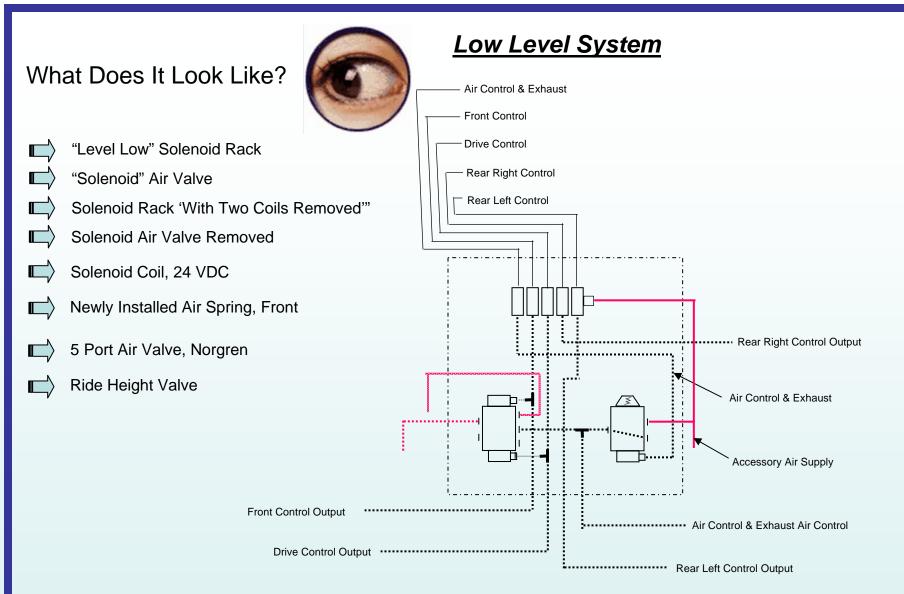



Click Here to go Back to Beginning

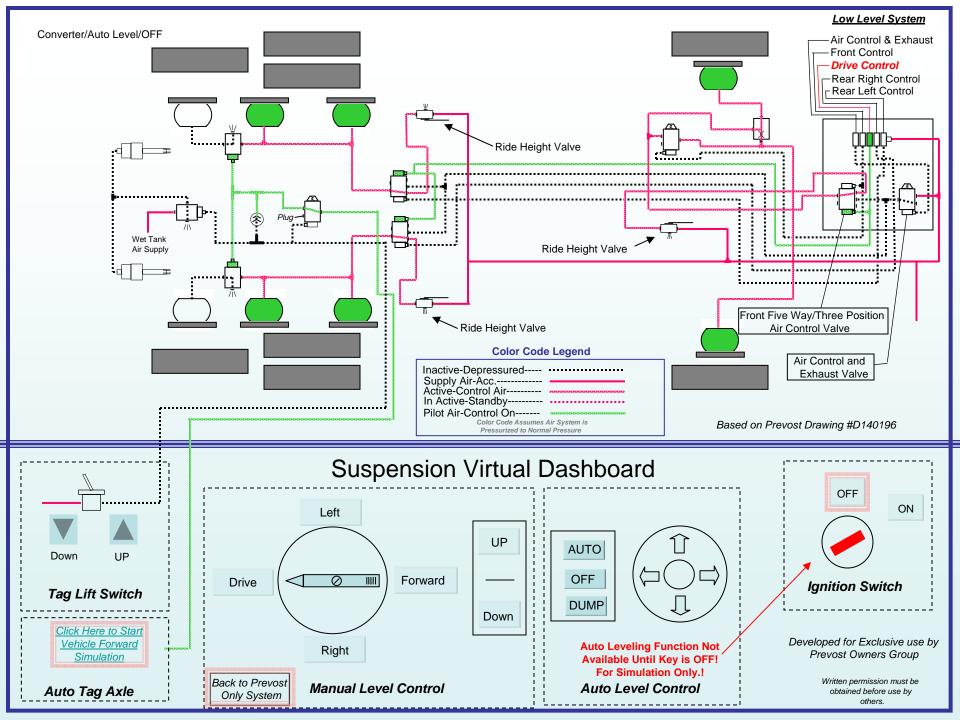

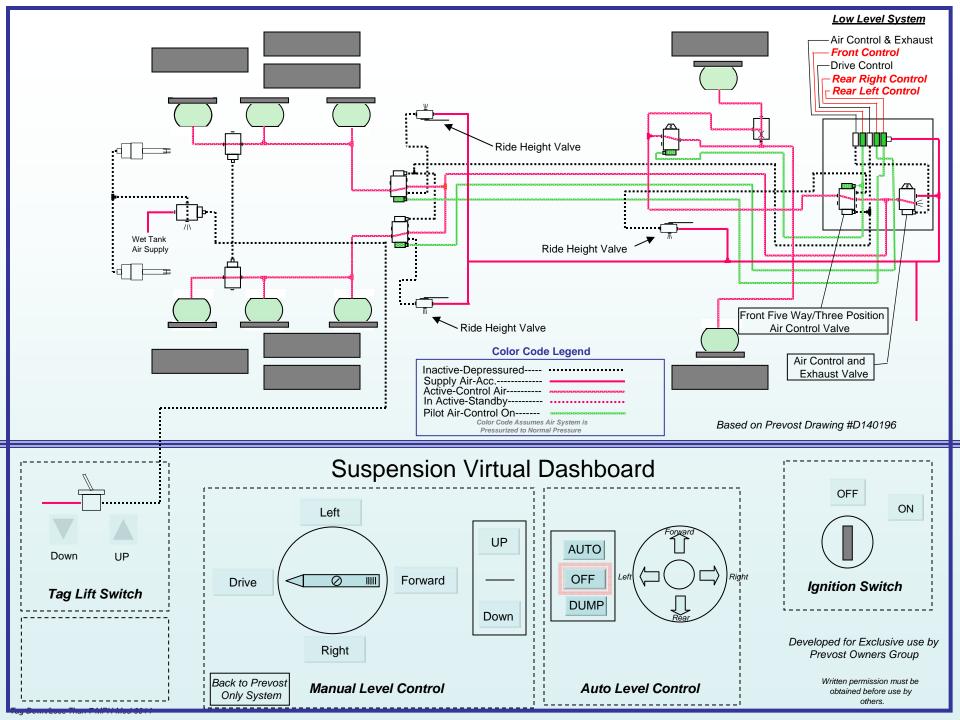

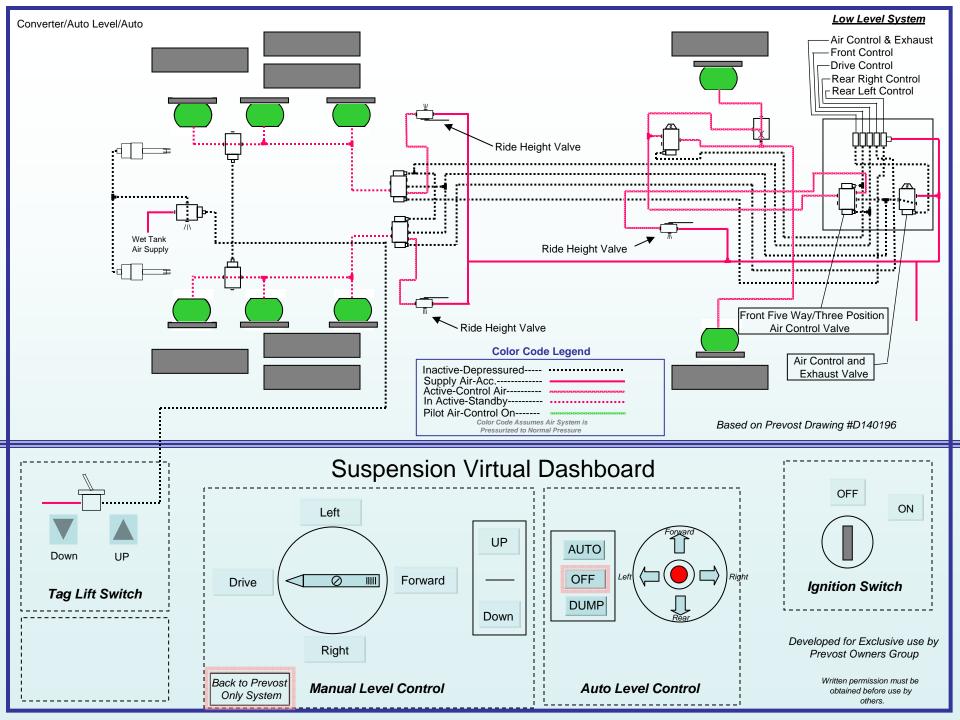

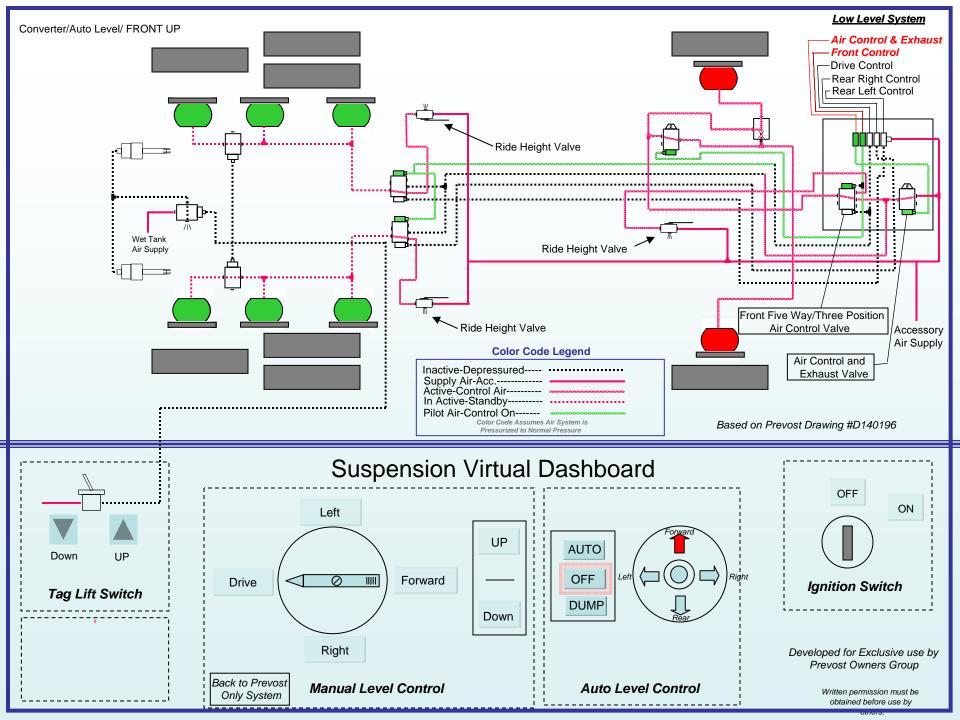

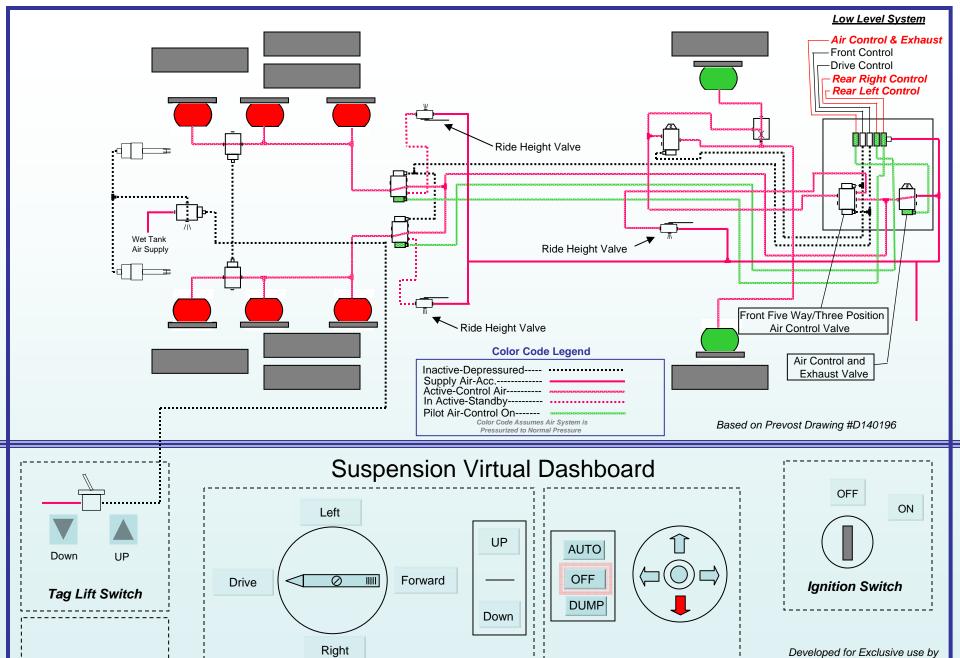

Back to Prevost


Only System


Manual Level Control


Written permission must be obtained before use by


Prevost Owners Group


Auto Level Control

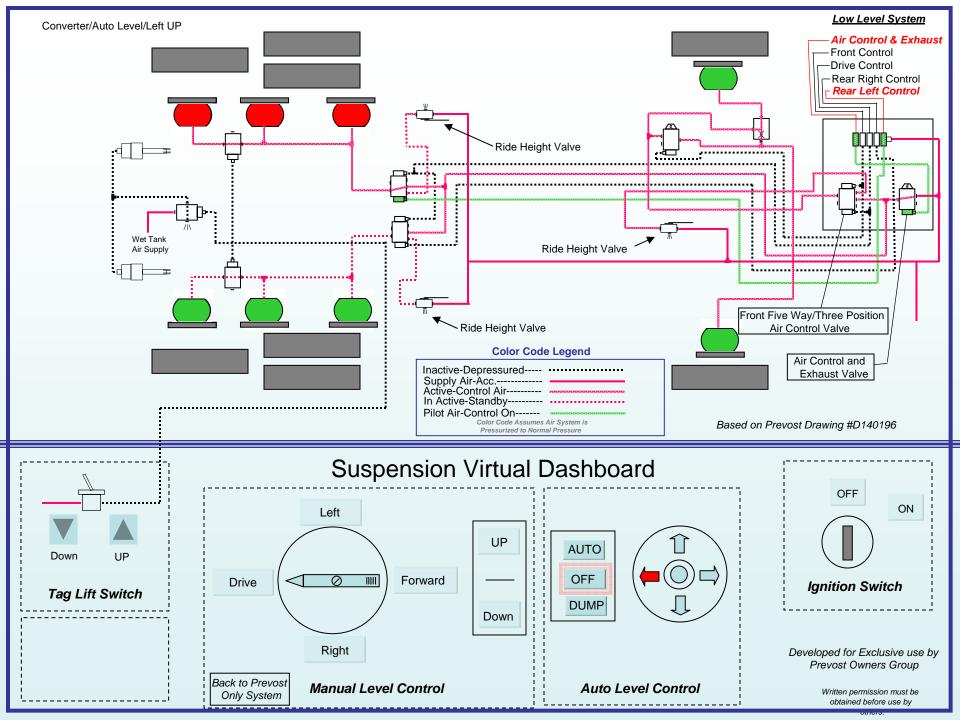

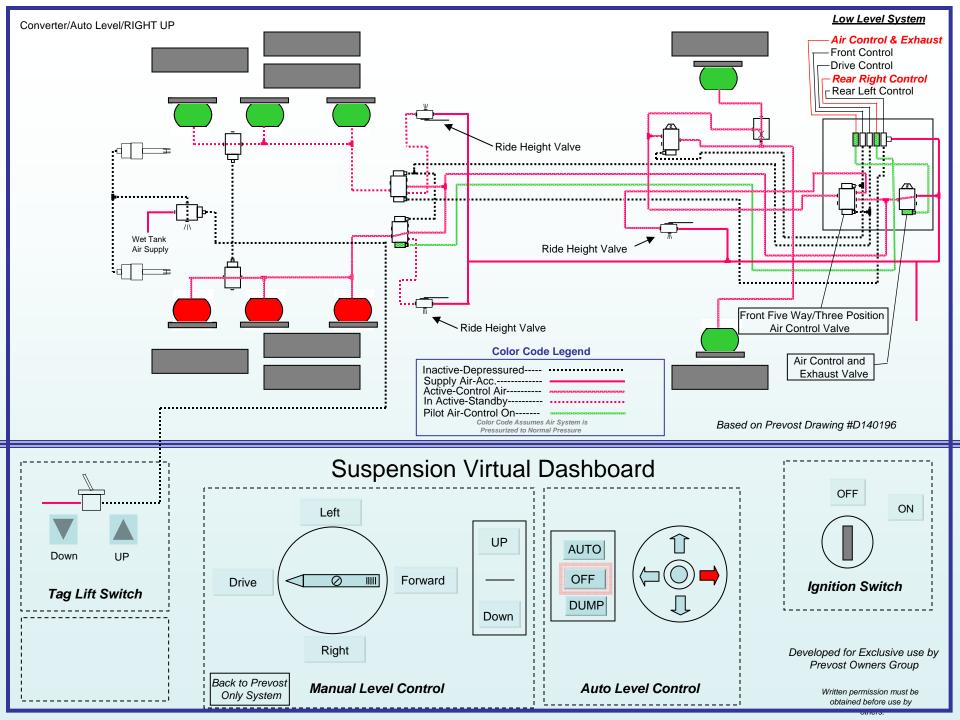

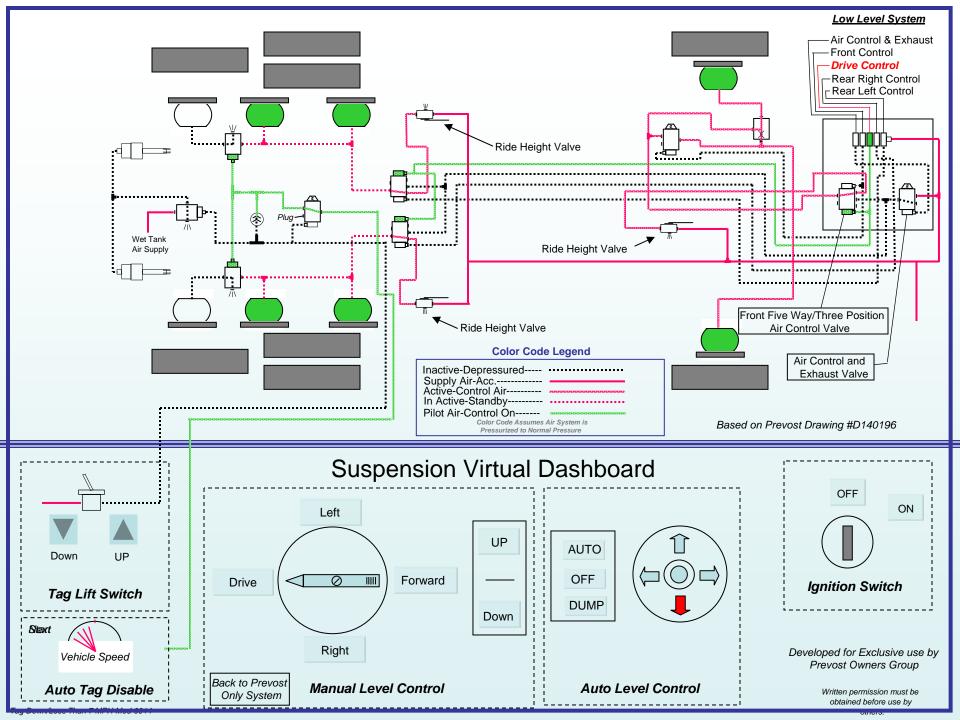

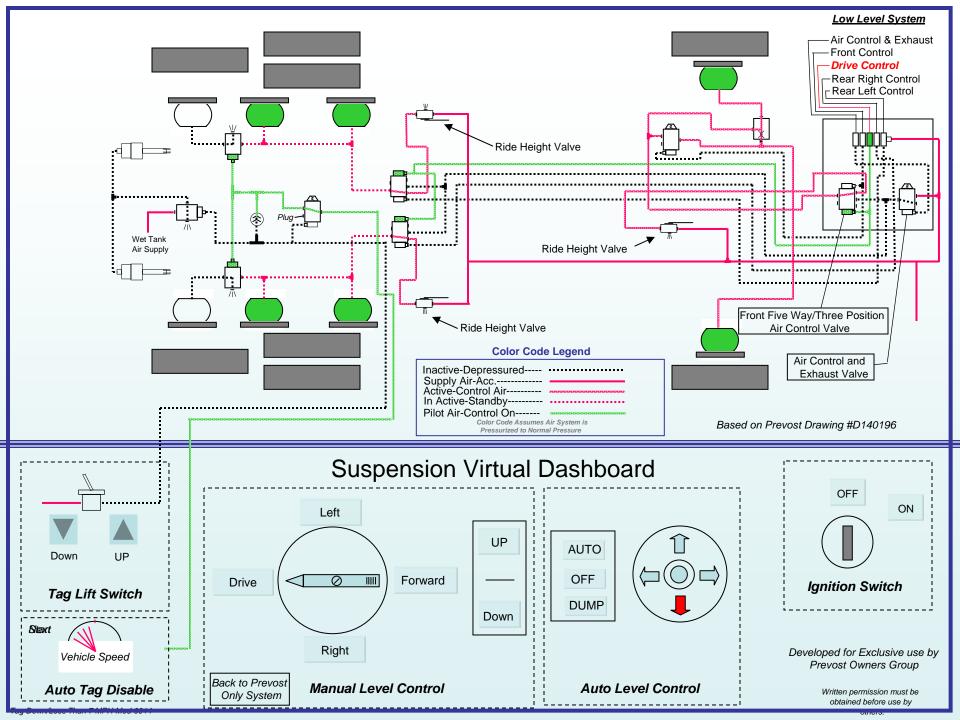

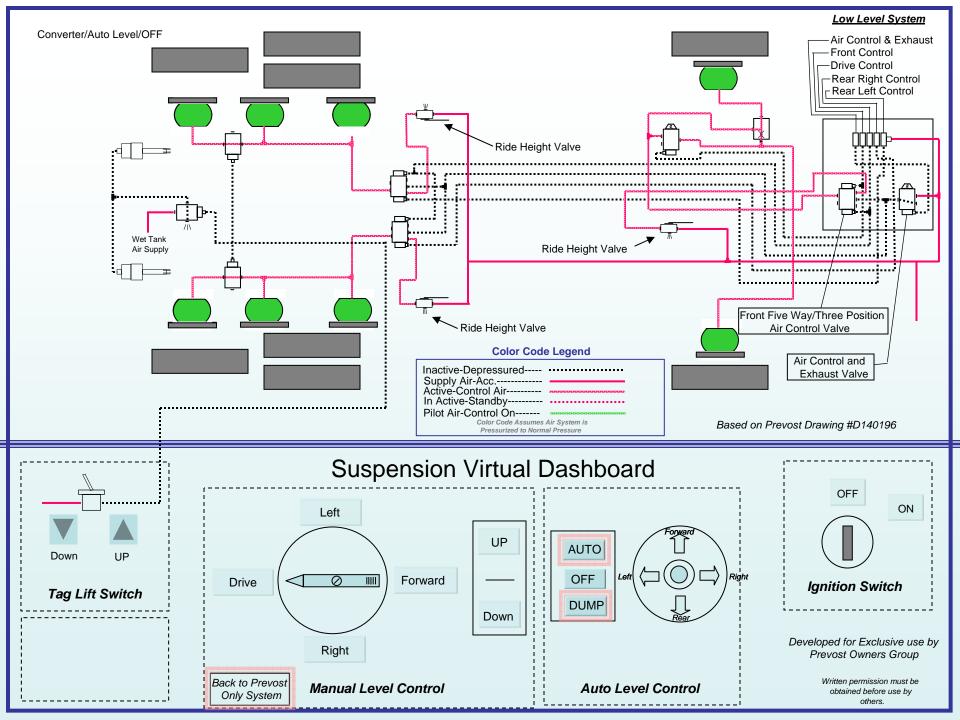

"Level Low" Solenoid Rack




Picture Courtesy of www.prevoman.com

"Solenoid" Air Valve




Picture Courtesy of www.prevoman.com

Solenoid Rack 'With Two Coils Removed"

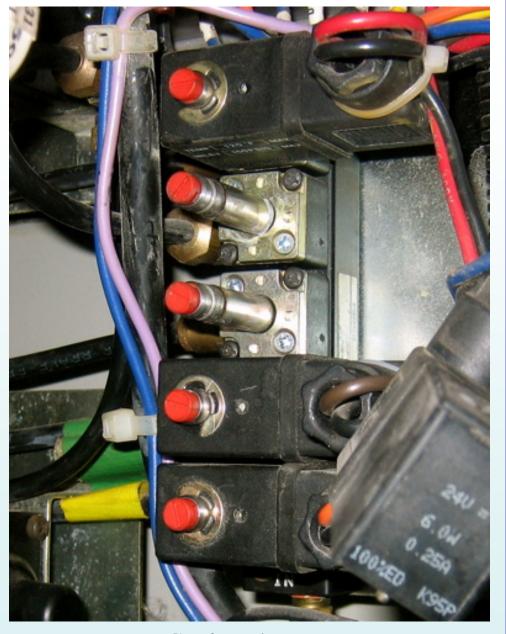

Picture Courtesy of www.prevoman.com

Solenoid Air Valve Removed

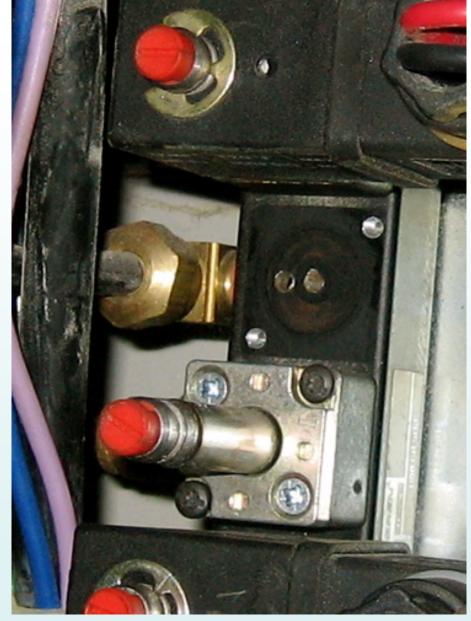


Picture Courtesy of www.prevoman.com



Picture Courtesy of www.prevoman.com

Solenoid Coil, 24 VDC

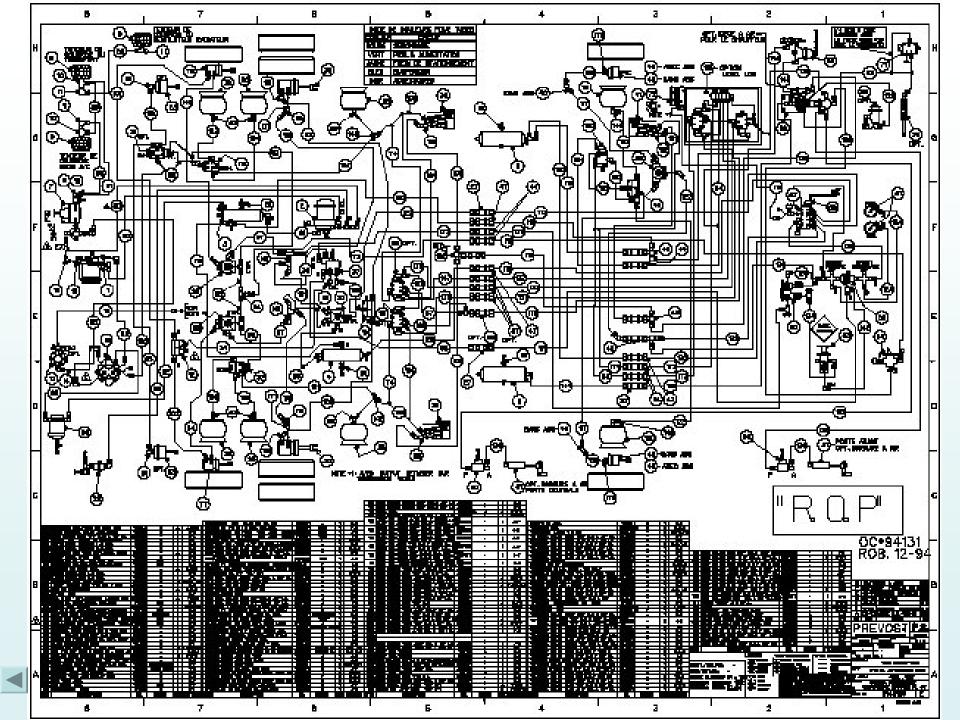

Newly Installed Air Spring, Front



Picture Courtesy of www.prevoman.com

5 Port Air Valve Norgren



5 Port Air Valve Mounted on a Demonstration Board

Picture Courtesy of Jon Wehrenberg

Ride Height Valve



Ride Height Valve Mounted on a Demonstration Board

Picture Courtesy of Jon Wehrenberg